



USE FOR 16 TO 20 FOOT GATES

PRODUCTS

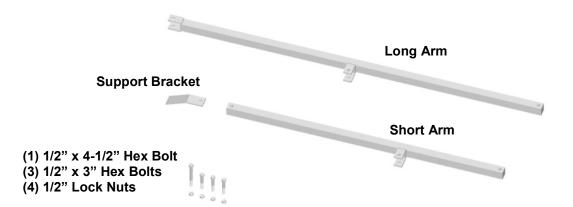


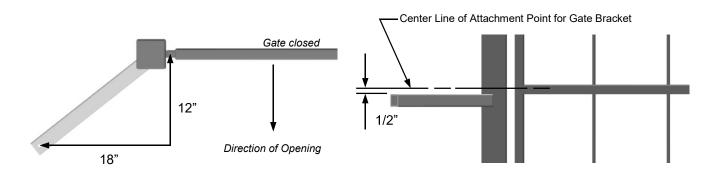





Pivot arm must be level for proper operation.

Mount short arm to pivot arm as shown

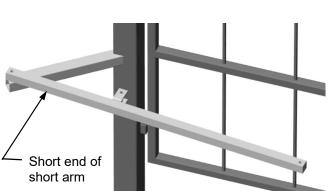

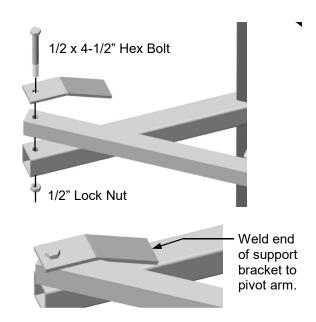

Mount the primary LGK arm and gate arm to the secondary arm as shown. Actuator should be extended.

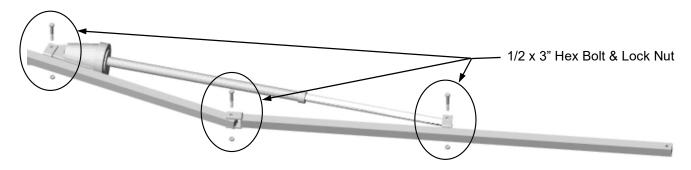

Align the end of the primary LGK arm to the gate and mount the gate bracket. Limits may now be adjusted as per the from gate arm manufacture installation manual.

All hardware should be tightened to allow free movement with minimum vertical play.

The gate bracket mounting location should be approximately 8 feet from the center of the hinge to the center of the gate bracket.

