


# Multi-Code Keypad Programming Instructions


## Step 1: Locate your transmitter/Remote.

- You will need to use it to program your keypad.
- Your transmitter/remote should be a Chamberlain, Digi-Code or Multi-Code brand

Chamberlain Transmitter

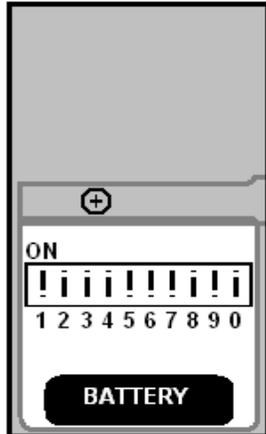


Digi-Code or Multi-Code Transmitter

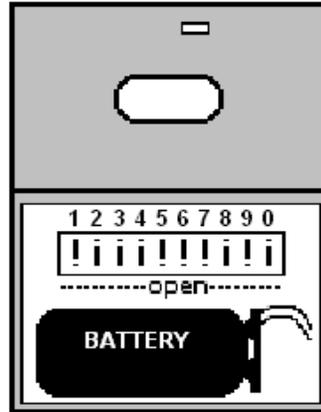

OR

## Step 2: Determine what your RADIO CODE is.

- Take the cover off of the transmitter to expose the dip switches (10 switches).
- Notice how the switches have two possible settings, **Up** or **Down**.
- Locate the switches that are **switched** to the **UP** position.
- Example:** The drawing below has 2,3,4,8,& 0 switched to the UP position.

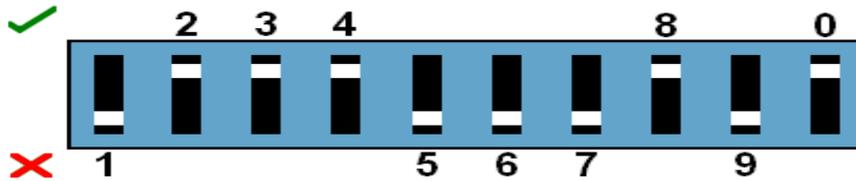

**Radio Code in this Example**

**2 3 4 8 0**


*Note: Radio code is read from LEFT to RIGHT*

## Step 3: Setting your radio code.

If you are not sure of the current radio code and access code programmed in your keypad you can dump memory to factory default by unplugging the battery for 30 seconds then reconnect the battery. This step defaults the access code to 1,2,3,4 and the radio code to 2,4,6,8,0.

**Press the following sequence of buttons to set your Radio Code**

- Radio Learn (RL)
- Radio Learn (RL) -- *L.E.D. comes on and stays on*
- Current 4-digit Access Code (ex/ 1234)
- Your Radio Code (ex/ 23480)
- Radio Learn (RL) -- *L.E.D. goes out and stays out*

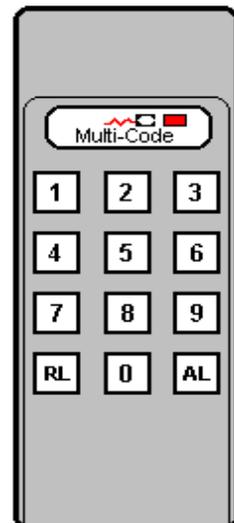

**Note:** If the L.E.D. light flickers upon pushing the **Radio Learn** button for the final time, there has been a programming error. Try taking the battery out and start the programming sequence over.

**Step 4: Setting your access code.**

Your access code is a 4-digit code that is used to open the gate.


This code can be any 4 digit you desire. Ex/ 1977

The factory default access code is 1234.

Press the following sequence of buttons to set your access code.

**Press the following sequence of buttons to set your Access Code**

- Access Learn (AL)
- Access Learn (AL) -- *L.E.D. comes on and stays on*
- Current Access Code (ex/ 1234)
- Your 4-Digit Code (ex/ 1977) L.E.D goes out and stays out
- Access Learn (AL) -- *L.E.D. goes out and stays out*

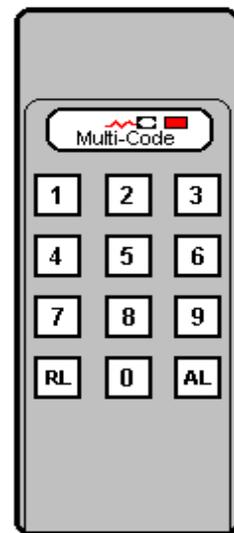

---

**Once you have Your Radio Code and Access Code programmed, you are done.**

\*\*\*\*\*TEST THE KEYPAD\*\*\*\*\*

**Note 1:** Batteries will last you about 7 - 12 months. You can avoid reprogramming the keypad if the old battery is replaced within 10 seconds with a new one.

**Note 2:** Changing your access code can be done by using the following sequence.  
**Access Learn - Access Learn - Old Code - New Code - Access Learn**

**Note 3:** Pressing **Access Learn (AL)** or **Radio Learn (RL)** Twice will tell the keypad you are ready to program. The LED on the keypad will light up and remain on.

Pressing **Access Learn (AL)** or **Radio Learn (RL)** Once at the end of the number sequence will tell the keypad you are ready to end programming.

The LED on the keypad will turn off.

If the LED flickers on and off then there was an error in programming.

Unplug the battery(setting the keypad to factory default) and retry programming the keypad.